

INSTALLATION INSTRUCTIONS

Troldtekt® access panel 600x1200 mm
Installed in C60 profile system

These instructions apply to installation of the Troldtekt® access panel 600x1200 mm in a C60 profile system.

INSPECTION ON RECEIPT

Check that the following components are complete and undamaged on receipt. Please inform the supplier immediately of any visible defects or non-conformities as we are unable to accept claims regarding visible defects or non-conformities once the access

panel has been fitted. Please also refer to the instructions regarding storage and acclimatisation as well as care and maintenance of Troldtekt acoustic panels – download at www.troldtekt.com

COMPONENTS




Outer frame



Inner frame with pre-installed acoustic panel



A

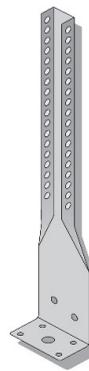

B




C

A. Nonius quickhanger, upper part


B. Nonius quickhanger, lower part

C. Nonius split-pins, two pins per fitting

INSTALLATION DIAGRAM

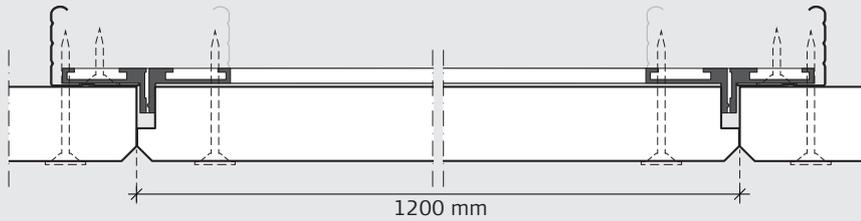


SEPARATING THE ACCESS PANEL PRIOR TO INSTALLATION

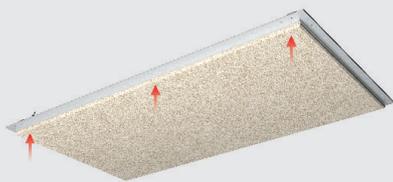

1: Release the inner frame from the outer frame by pressing it from below. This releases the latch mechanism.




2: Once the frame is open, release the snap hook.

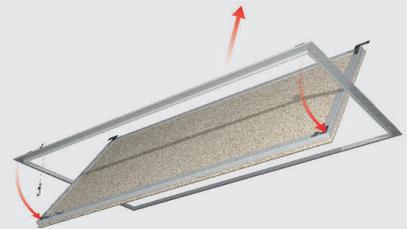


3: The frames can now be separated.

INSTALLATION OF 600X600 MM ACCESS PANEL

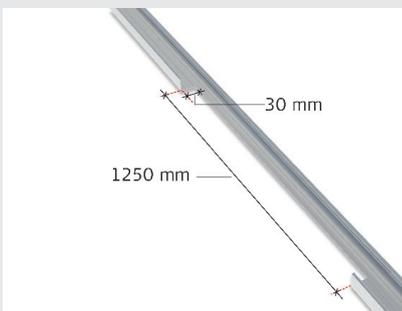



A: Make cuts as shown to enable installation in the two C60 profiles which will carry the access panel.

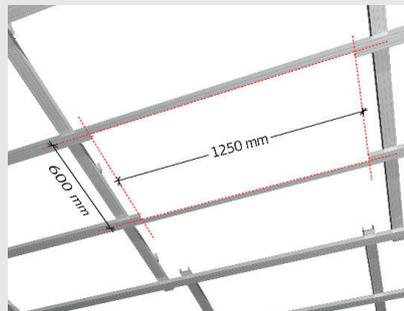

B: Profile system prepared for installation of the 1200 mm access panel.

A NONIUS quick-hanger installed on underside of access panel (short side)
 B NONIUS quick-hanger installed on underside of C6o installation profile (long side, opening)

- Self-tapping screw

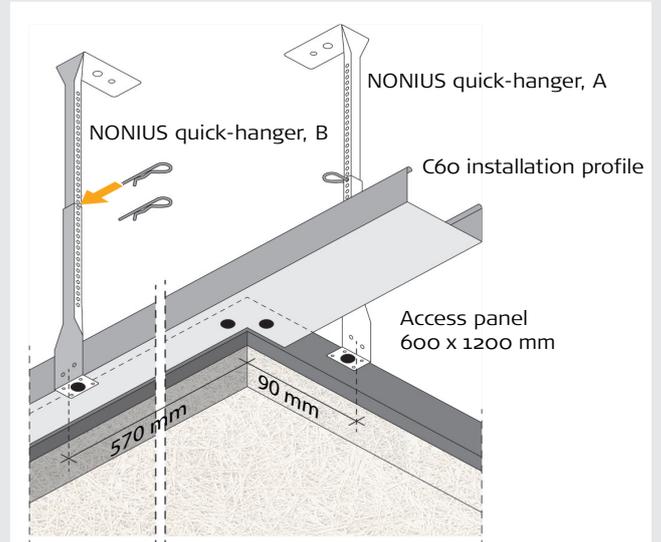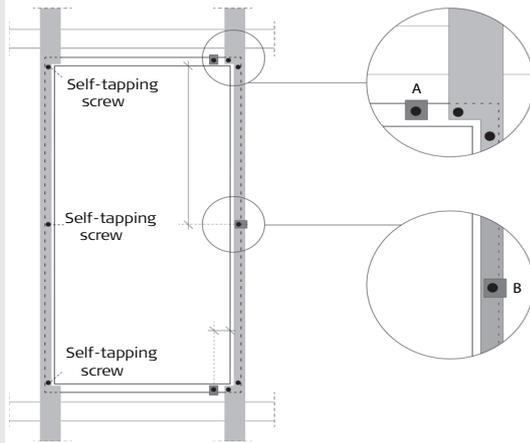

C: Hold the outer frame in position and secure it to the profiles with seven self-drilling screws. Then replace the access panel inside the outer frame.


D: The nonius quick-hangers are installed here.




E: To open the access panel, press the Troldekt acoustic panel lightly under the push release locks.

F: Release the snap hook to open the access panel completely.

LOAD BEARING REPLACEMENT

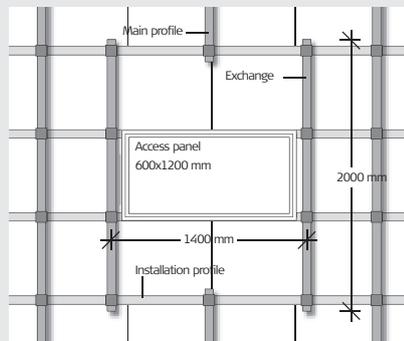

Load bearing replacement with 1 main profile interrupted

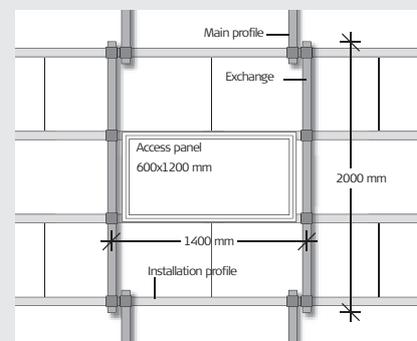

Load bearing replacement with 2 main profiles interrupted

ACCESSORIES INCLUDED

Product name	Nonius quick-hanger, upper part	Nonius quick-hanger, lower part	Nonius split-pin
Length (mm)	790	-	-
Quantity per access panel	3 pcs.	3 pcs.	6 pcs.