

INSTALLATION INSTRUCTIONS

for Troldekt® wall deco / v-line installed with screws

These instructions apply to the installation of Troldekt® wall deco / v-line with screws on wooden battens. You can download all Troldekt installation instructions at www.troldekt.com.

INSPECTION ON RECEIPT

On receipt, check that the supplied components (see overview at the top of page 2) are intact and undamaged.

Please inform the supplier immediately in case of visible flaws or defects as we cannot accept claims regarding visible flaws and defects after

the panels have been installed.

Please also refer to the instructions regarding the storage and acclimatisation as well as the care and maintenance of Troldekt acoustic panels – download at www.troldekt.com

CONTENTS




Troldekt wall deco / v-line is available in 3 colours. One set contains two panels and corresponding screws in the same colour.

You will find the colour indication on the side of the box:

White 101

Grey 208


Black 207

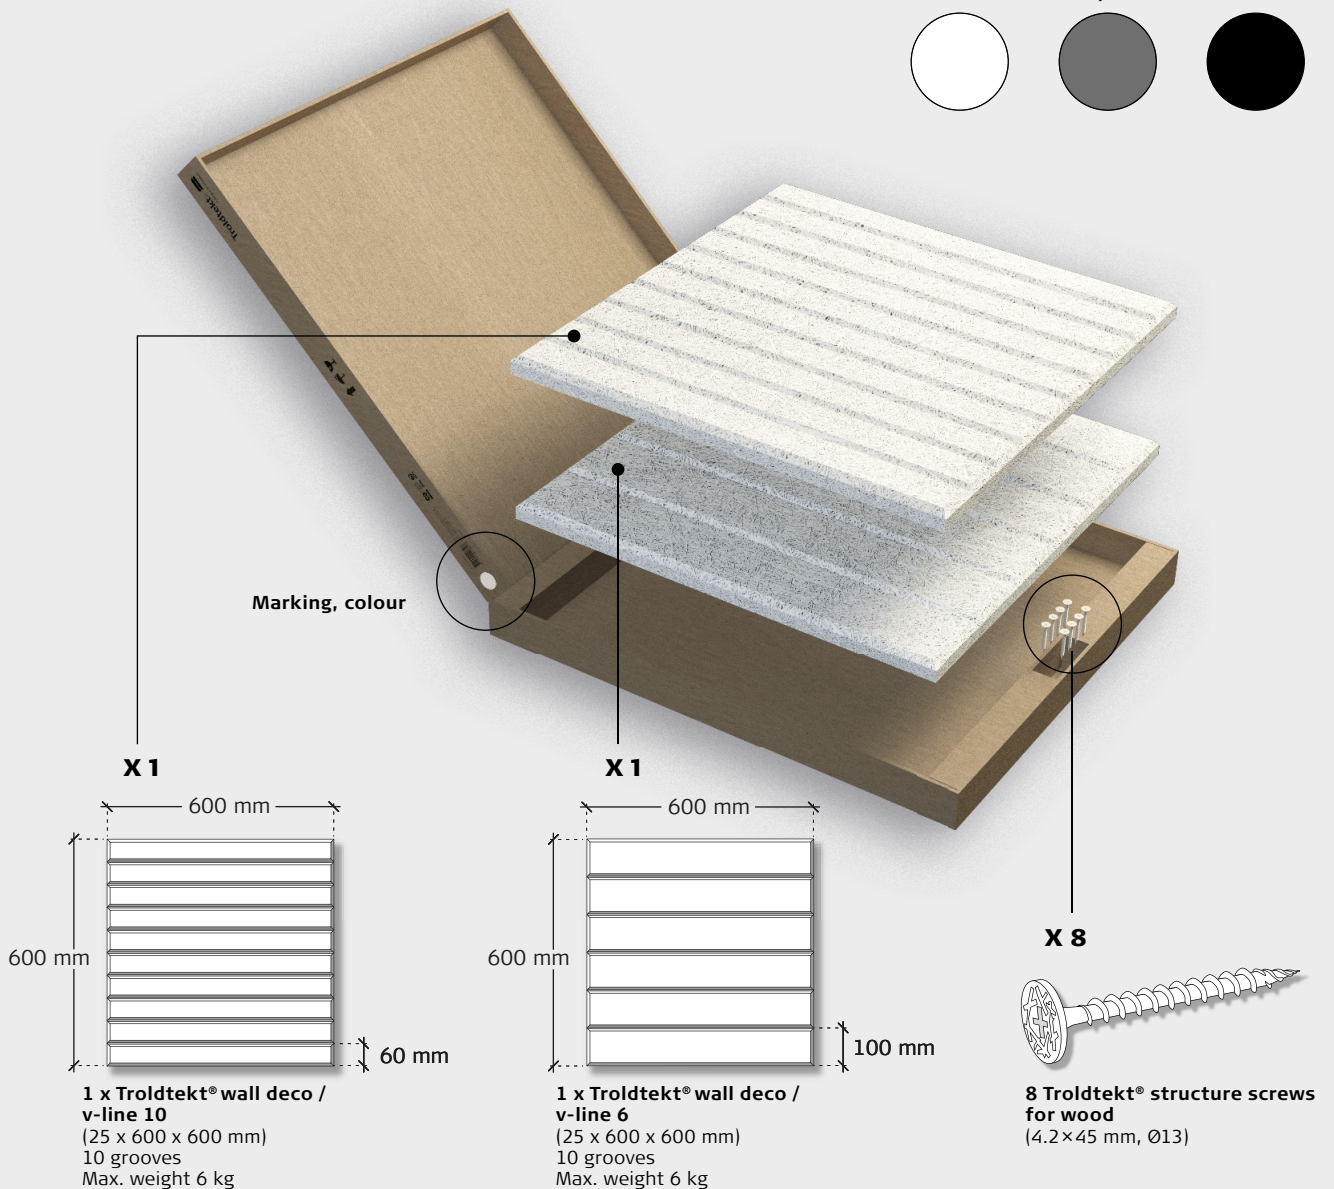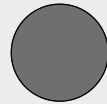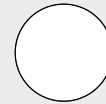


PROFILE DRAWINGS

Both wall deco / v-line 6 and v-line 10 have milled grooves on the top side of the panels.


The edges are the same on all four sides, so they fit together when you install them:

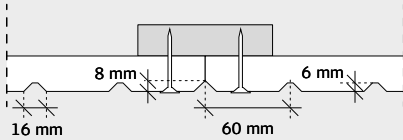

CROSS-SECTION
Troldtekt® wall deco / v-line 10
60 mm distance between grooves

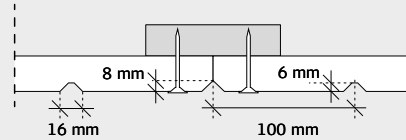



CROSS-SECTION
Troldtekt® wall deco / v-line 6
100 mm distance between grooves

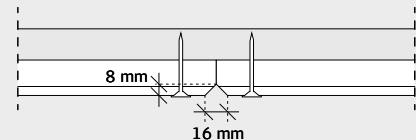

LONGITUDINAL SECTION
Troldtekt® wall deco /
v-line 6 and v-line 10
100 mm distance between grooves

SCREW POSITIONING

Be careful not to screw in the supplied Troldtekt screws too far, as doing so can cause an indentation in the panel. The screws should be screwed at the "top" of the panel (Fig. 1) and not in the bottom of the panel's grooves (Fig. 2)

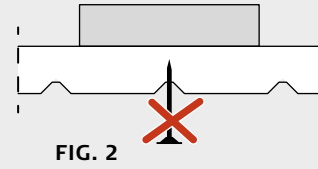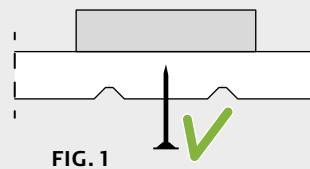


INSTALLATION OF WOODEN BATTENS

Place the wooden battens on a firm surface. Troldtekt wall deco can be installed and combined in many ways.

The following illustrations (A, B and C) show examples of how to set up a wall deco panel (2 or 6 panels in total) on wooden battens.



A: VERTICAL BATTENS TO EDGE

In the examples shown, the wall deco is installed on vertical battens, which are recessed 10 mm from the vertical edges of the wall deco panel. If necessary, you can paint the visible side of the battens black before installation (Fig. 3), or another colour that matches the panel colour (Fig. 4).

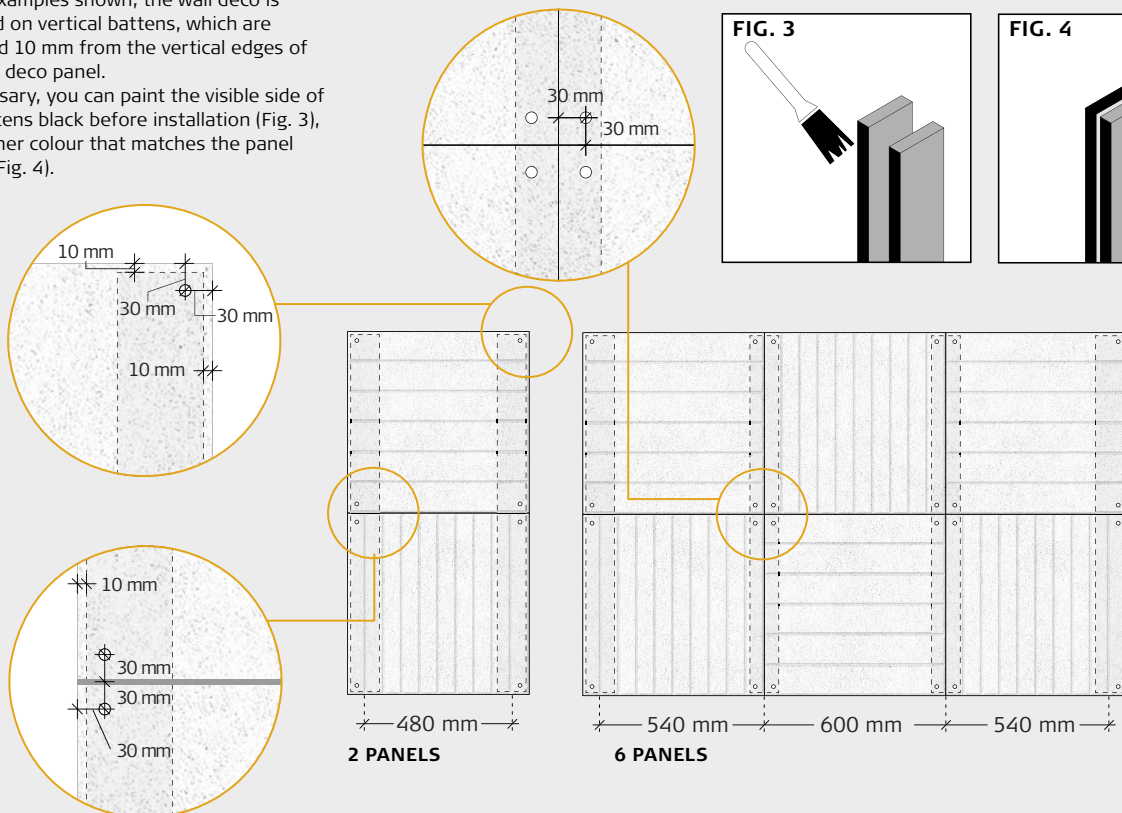



B: HORIZONTAL, RECESSED BATTENS

The horizontal battens are recessed 100 mm from the panel edges (Fig. 5) so that they are not visible from the sides, giving the wall deco a light look.

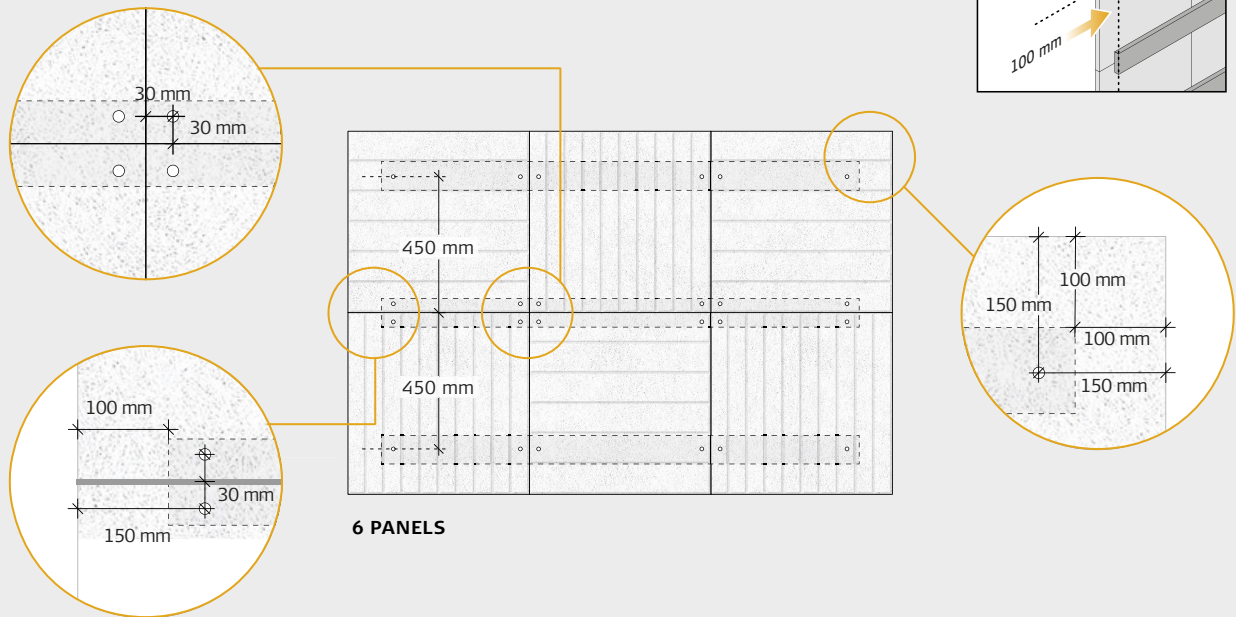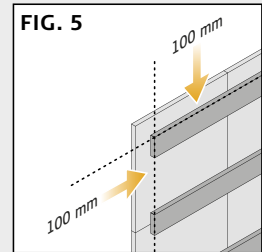

C: VERTICAL, RECESSED BATTENS

As in example B, the battens are recessed 100 mm from the panel edges (fig. 6), and are simply turned vertically.

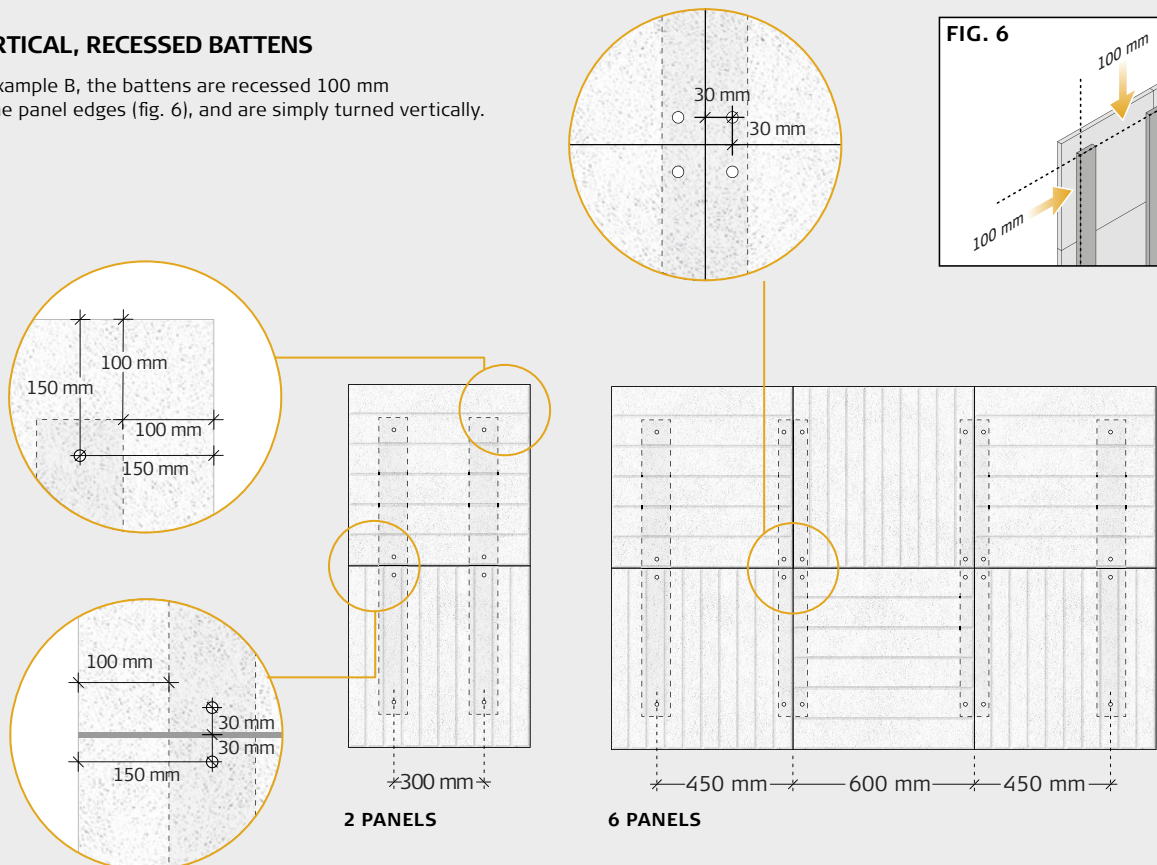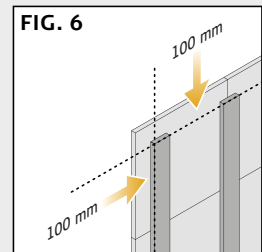



**CONGRATULATIONS ON YOUR PURCHASE OF
TROLDTEKT® WALL DECO / V-LINE**


Troldtekt consists of the natural material wood, and cement extracted from Danish mineral resources. Therefore we recommend that all Troldtekt panels are acclimatised before installation. We recommend that you read:

Instructions for receipt, storage and acclimatisation before installing Troldtekt® acoustic panels



If you need to cut or machine the panels, we recommend reading

Instructions for machining Troldtekt® acoustic panels

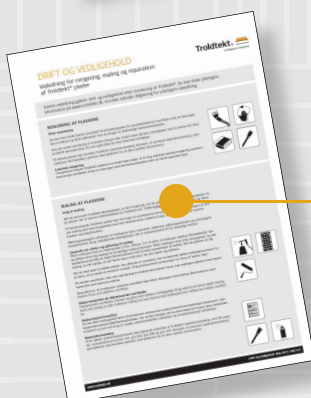

During transport and when cutting, loose dust may settle in the panels. We therefore recommend that you vacuum the panels very lightly with a brush nozzle once the panels are installed. If you need to repair or paint the panels, we recommend that you read

Instructions for cleaning, painting and repairing Troldtekt® acoustic panels

**All three instruction guides can be downloaded from
www.troldtekt.com**