


INSTALLATION INSTRUCTIONS


Troldtekt® acoustic panels and Troldtekt® Plus Installed in exposed T35 profiles in removable, suspended ceiling system

These instructions apply to installation of Troldtekt® acoustic panels and Troldtekt® Plus in exposed T35 profiles in removable, exposed ceiling system. Download installation instructions for Troldtekt® T35 profile system from www.troldtekt.com.


PROFILE DRAWINGS

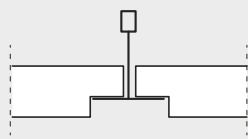


KO-FS: With rebate for exposed T-profile

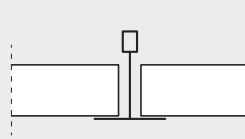

KO-S: Square edge for exposed T-profile

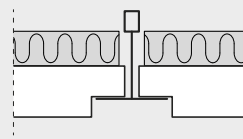

KO-FS: Plus

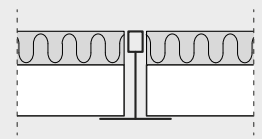

KO-S: Plus

INSTALLATION

Check that all hangers are secure after installation of the profile system. Adjust if necessary. Now lay the Troldtekt panels in the grid.

Note: When installing **600 × 600 mm** square panels, it is important to ensure that the wood wool fibres run mainly parallel in one direction. To ensure a uniform appearance,

install the panels so that the printed Troldtekt texts on the back of the panels all run in the same direction.

ILLUSTRATION - INSTALLATION

